


Cleaning Innoseal® Sealer

Scan QR-code
for more tips and tricks




Or go to
www.innoseal.shop

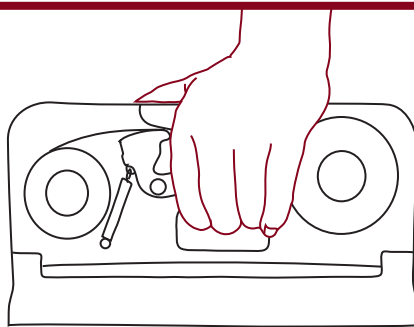

Step 1: Open the Sealer

Position one hand on top of the Sealer and place fingertips under the lid. Lift up and pull forward.

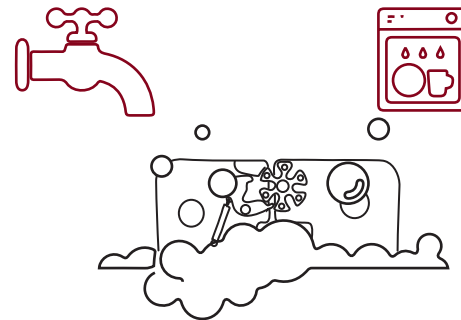


Step 2: Clean Sealer

Use a damp cloth, soap or the dishwasher to clean your Sealer. All parts can be removed easily to give your entire Sealer a deeper cleanse.

Caution: The knife in the knifeholder is extremely sharp!

Tip: Clean your Sealer when changing each Refill set, and at least once a year give it a deep cleanse.


- 1) This will extend the lifetime of your Sealer, but most of all it makes sure you can close your bags without problems.
- 2) We recommend to always remove all Sealer parts before cleaning.

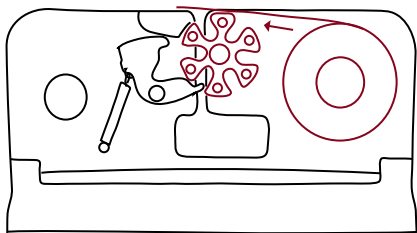

Step 3: Changing Tape Roll


Load the Tape with the sticky side up. Thread the Tape through the opening, above the Spoke Wheel, and temporarily stick the Tape to the top of the casing.

Caution: The Tape can only be loaded one way, so if the lid does not close, the Tape roll must be removed and reversed.

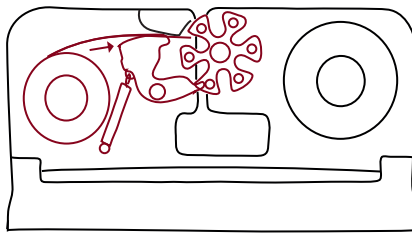

Step 4: Changing Paper Roll

To load the Paper, assist the end of the Paper roll into one of the Spoke Wheel ports (via the passageway; see arrow). To make sure it fits in the Spoke Wheel port, turn the Spoke Wheel a half-a-click.

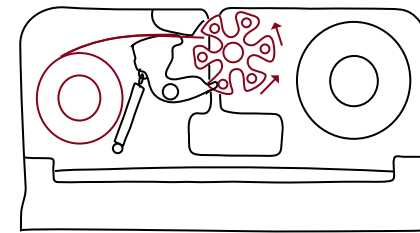

Step 4: Turn the Spoke Wheel

Before you can use the Sealer, turn the Wheel until you hear a full click (counter clockwise). The Wheel now has grip on the paper.

Seal on!

Caution: The first seal (and sometimes the second) will be lost as the Tape & Paper adjust their alignment, if you do not have a Paper & Tape seal by the third attempt, retrace the above steps.